


EBS Socket Tester

446 300 360 ST




EBS Plug Tester

446 300 360 PT

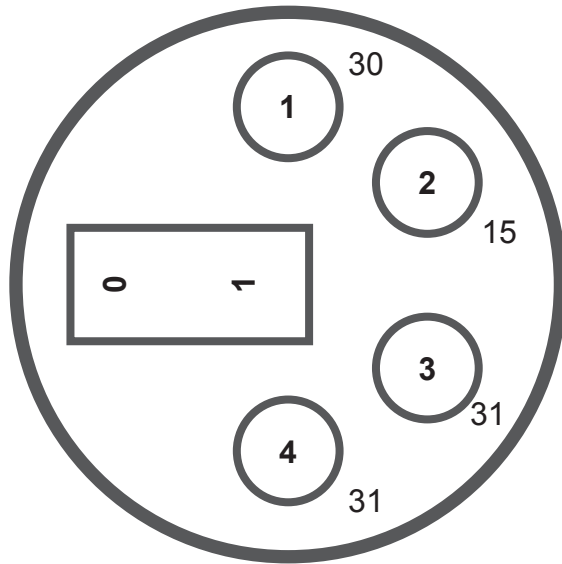


1/30 Battery +
 2/15 Ignition +
 3/31 ECU Ground -
 4/31 Solenoid Ground -


Ignition Off.
Connect test plug.
Do 1 , 3 & 4 light up?

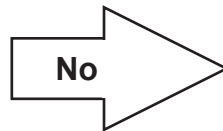


Check battery fuse (Pin 1)
Check ground connections
(Pins 3 and 4)

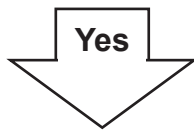


Switch on ignition.
Does 2 light up?

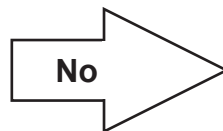

Check the fuse on the igni-
tion circuit (Pin 2)

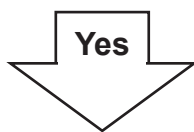

Turn on the switch.
Does the dashboard trailer
ABS fault lamp light up?

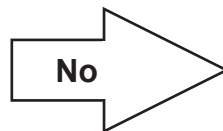

Check
the dashboard fault lamp

Air Brake Systems

4 / 16 Leighton Place

Hornsby NSW 2077

Head Office

02 9482 1733

NSW

0407 400 417

QLD

0448 521 733

VIC

0429 116 448

sales@airbrake.com.au