
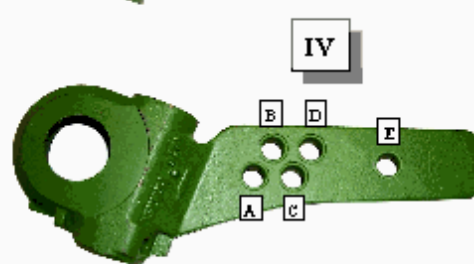
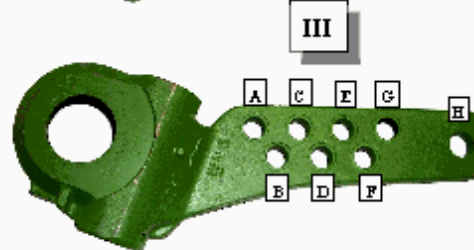
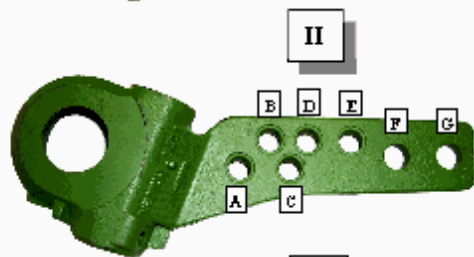


## Automatic Slack Adjusters Trailer Kits

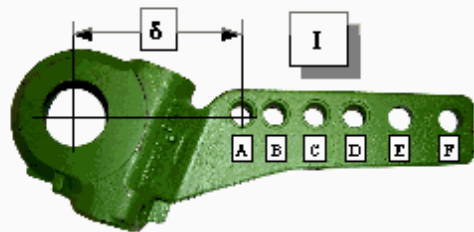

Body Type	Holes	A	B	C	D	E	F	G	H
I	∅ (mm)	19	19	19	19	16	16	-	-
	δ (mm)	105	127	153	181	212	250	-	-
	Bushes (∅ 19→14)	✓	✓	✓	✓	-	-	-	-
II	∅ (mm)	19	19	19	19	19	16	16	-
	δ (mm)	105	127	140	151	179	212	250	-
	Bushes (∅ 19→14)	✓	✓	✓	✓	✓	-	-	-
III	∅ (mm)	19	19	19	19	19	19	19	16
	δ (mm)	105	120	135	150	165	180	195	250
	Bushes (∅ 19→14)	✓	✓	✓	✓	✓	✓	✓	-
IV	∅ (mm)	19	19	19	19	19	-	-	-
	δ (mm)	114	127	140	152	205	-	-	-
	Bushes (∅ 19→14)	✓	✓	✓	✓	✓	-	-	-

Old Adjuster n°	TSS Kit n°	TT Kit n°	Body
72250	72948D	SAB.2948.KIT	I
72254	79023D	SAB.9023.KIT	I
72758	-	SAB.2758.KIT	III
72266	79022D	SAB.9022.KIT	I
72261	79004D	SAB.9023.KIT	I
72274	79004D	SAB.9023.KIT	I
72702	79005D	SAB.9005.KIT	II
72703	72875D	SAB.2875.KIT	III
72763	72876D	SAB.2876.KIT	III
72581	79035D	SAB.9023.KIT	I
72788	72788D	SAB.2788.KIT	IV

### SAB.9023.KIT



Fitting kits will include bolts & screws to allow fitment to ROR - BPW - SAF backplates.